


VCA

Voltage Controlled Amplifier

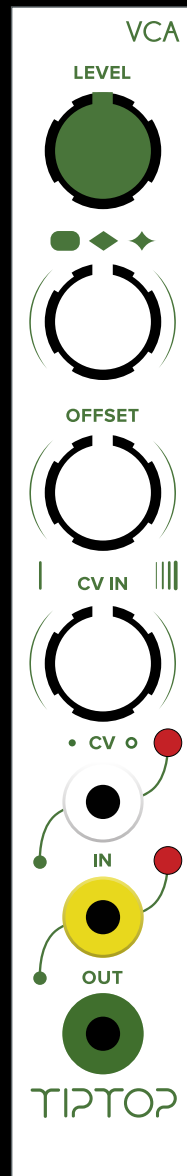

Tiptop Audio

VCA User Manual

The Tiptop Audio VCA is a single-channel variable-slope voltage-controlled amplifier in Eurorack format. It has the following controls (top to bottom):

1. LEVEL - sets the output volume
2. SHAPE - varies the response curve of incoming CV from Logarithmic, Linear, Exponential
3. OFFSET - opens and closes the VCA by adding CV offset
4. CV IN - attenuator for signals coming through the CV IN jack
5. CV IN jack
6. Audio IN jack
7. Audio OUT jack

Let's learn the VCA functions in details:

(LEVEL) Master Volume:

The simplest function of the amplifier is to use the level knob to increase the volume of an incoming audio signal and send the amplified signal out through the audio output. The master volume control knob sets the VCA signal output level. It is a post-VCA gain stage which lets you match the VCA out level with other sounds in your system. It is also useful to help compensate for volume differences between the different VCA response shapes.


Variable Response Curve Control:

At its heart, this VCA uses a novel design of control circuitry a function that lets you sweep continuously through three different response curves: Logarithmic, Linear, Exponential giving you all three shapes in a single module. This special control circuitry was invented by Mr.Osamu Hoshuyama, a long time synthesizer circuit designer from Japan. The design was adopted into the VCA module to make it a great sounding synthesizer VCA for all duties: Gating audio, Amplitude Modulation effects, CV Modulation and Audio Level controls. These are important features in a VCA. For example, when processing CV signals, linear response is preferred, on the other hand processing audio signals exponential response curve is preferred (this is our ear's natural response curve). Having the possibility to morph between the two is important as quite often an "in-between" response curve is required. Being able to fine tune the response curve is also important when mixing and matching modules from different manufacturers. The third shape, Logarithmic response, is an unorthodox response curve that opens up yet more room for shaping the incoming CV.

With this design, different shapes will have different gain and the CV IN and LEVEL knobs are used to re-adjust the volume after adjusting the shape. When incoming CV is a tad below CV clipping point (Clip light LED), that is where the gain of all 3 shapes becomes fairly even. This is the factory default setting (using the BIAS ADJ trimmer at the back you can adjust this point to your liking. More on that later).

1. Patch a slow 10Vp.p Triangle wave from your VCO or LFO into the CV in on the VCA
2. Turn the OFFSET knob off
3. Turn the CV IN knob all the way up till the CV Clip LED flashes. Now slowly turn it back to the point where it stops flashing.
4. Connect a sound wave from another VCO playing a constant audio tone into the VCA Audio IN. Set the SHAPE knob to the center.

In normal use we won't spend much time to set the even-gain point for all shapes, instead we set a shape and adjust the CV IN and LEVEL knobs to the gain we want. This takes a bit of knob twiddling but is sure worth for having all those shapes available to us in a single module.

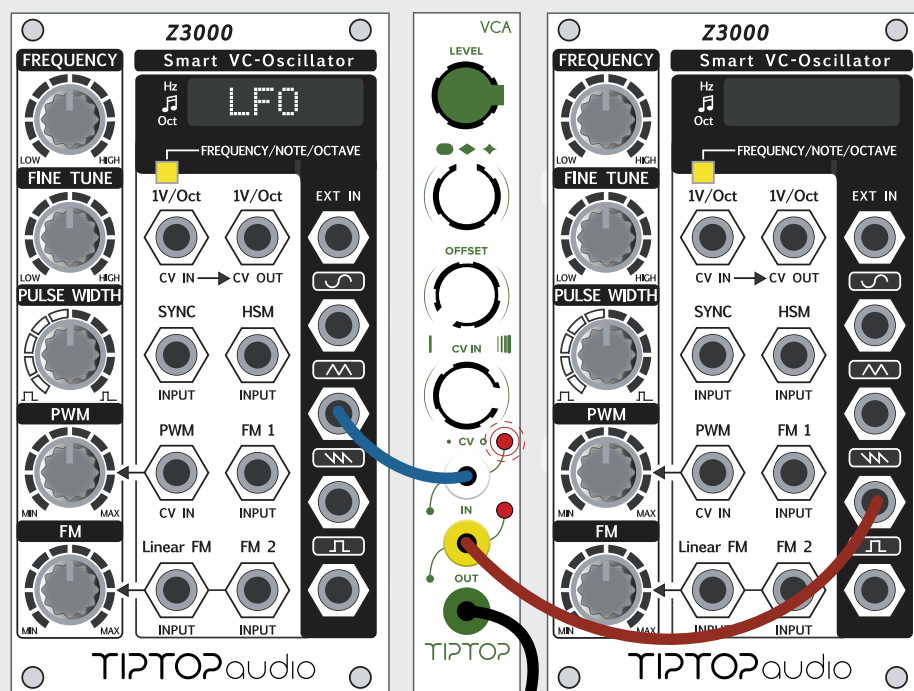

SOUND SYSTEM

Offset Control:

Offset generates CV that gets mixed internally with CV from the CV IN jack. This addresses three primary functions. First, manually open up the VCA; second, when you don't want complete silence between the notes and would rather have a constant signal present, allowing you to increase or decrease signal when CV is applied. The third is when the VCA is used with a bipolar signal like a LFO. With no offset control, a bipolar signal will open the VCA only during its positive swing. By setting the offset in the middle, correct bipolar modulation can be achieved.

CV Attenuator:

Manual control for adjusting the level of signals applied to the CV input. When the CV LED flashes it means the incoming signal peak is clipped. This is useful to prevent envelopes from getting their peak signal clipped which aggressively cuts off the dynamic response of the VCA. This is another unique feature of this VCA.

Signal Input:

Connect audio or CV signals that you want to process with the VCA here. When the RED LED flashes the audio is clipped, this can be good if distortion is what you are looking for. For some sounds like nicely rounded bass drums or bass lines, clipping will have negative effect on their original qualities.

CV Input:

The CV input is a dual-purpose input and lets you use the module as either a Voltage Controlled Amplifier (VCA) or as a Amplitude Modulator synthesis effect (AM). As a VCA, the CV input will take in CV signals from Envelopes, LFO's, Step Sequencers, Random CV Generators etc. When used as Amplitude Modulator, the CV input takes audio in from a VCO or any other sound source.


Signal Output:

The output of the VCA.

VCA is one of the most important building blocks in synthesis and is a must have for all but the most simple patches, here are a few examples.

Quick Start:


1. Set the SHAPE knob to the center.
2. Patch a sound source into the IN jack.
3. Patch the OUT jack to your sound system.
4. Turn the LEVEL knob to maximum.
5. Start to turn the OFFSET knob on and listen as the VCA starts to sound.
6. Turn the OFFSET knob off, patch an envelope like the Z4000 out into the CV jack.
7. Turn on the CV IN knob and trigger the envelope: you should hear the VCA turning on and off followed by the envelope shape.

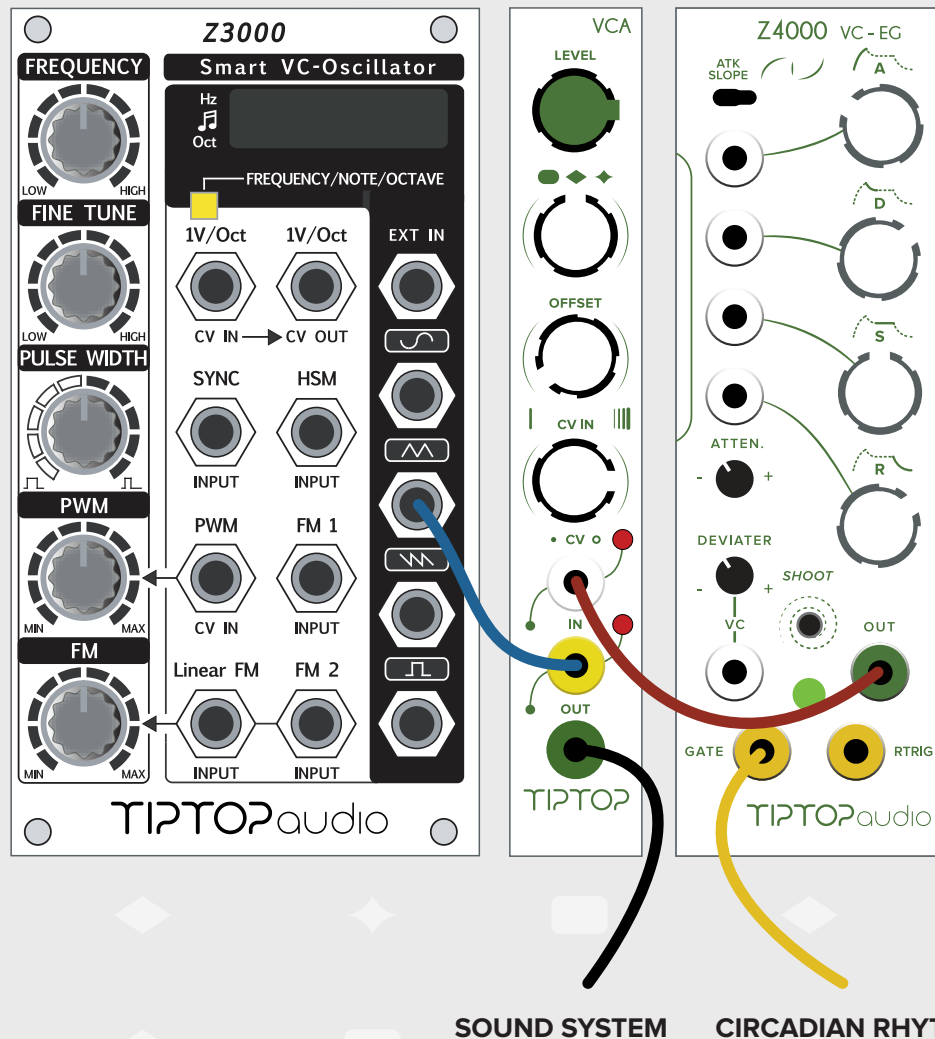

Dynamic Volume Control (Patch 1):

This is the most common use for a VCA and is patched this way in virtually every synthesizer


1. Patch SAW waveform OUT from Z3000 oscillator to Audio IN of a VCA.
2. Set the LEVEL to around 1 o'clock, set SHAPE to logarithmic (left), set the offset to "off" (left), set the CV IN attenuator knob to fully open (right).
3. Connect the output of Z4000 ADSR envelope to the CV input of the VCA. Set the envelope controls as follows: Attack off (left), Decay at 2 o'clock, Sustain at 12 o'clock and Release at 3 o'clock.
4. Connect the output of the VCA to your sound system. Now trigger the envelope. As the envelope opens up it will open the VCA letting the sound from the oscillator to pass through. To change how long the VCA will let the sound to pass through, play around with ADSR controls.
5. Now patch Forbidden Planet Filter between the oscillator and the VCA, you just created a simple Subtractive patch.

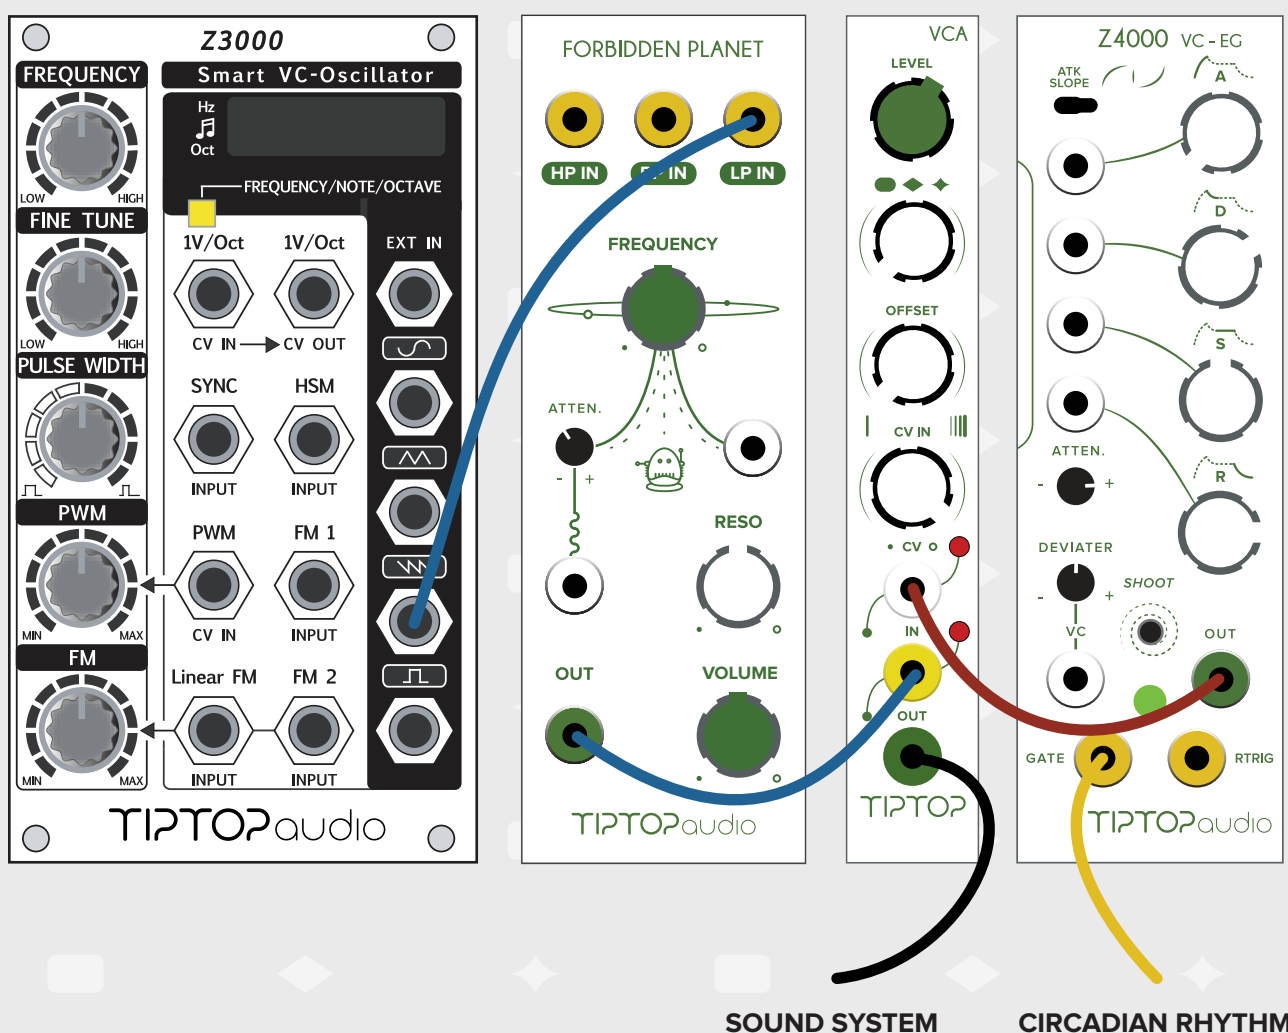

Voltage Controlled Modulation Index (Patch 2):

Another great use for a VCA is to dynamically control modulation amounts. Lets automate Filter Frequency Modulation. We will expand on the patch from a previous example.

1. Connect a Sine wave from Z3000 oscillator in LFO mode to the input of a VCA, connect the VCA's output to the un-attenuated frequency CV input on Forbidden Planet.
2. Connect Z4000 to the CV input of the VCA. Set VCA as follows: LEVEL fully open (to the right), SHAPE to linear (middle), OFFSET to 12 o'clock, CV IN attenuator to fully open (right). Set Z4000 as follows: Attack at 2 o'clock, Decay at 3 o'clock, Sustain at 12 o'clock, release at 3 o'clock.
3. Now trigger the envelope. As the envelope opens up, it will open the VCA which in turn will let the modulating LFO to pass through the VCA to filter frequency. Every time Z4000 is triggered the Filter frequency will be modulated by the slowly opening LFO. To lower the maximum modulation amount bring down the CV IN attenuator on the VCA.

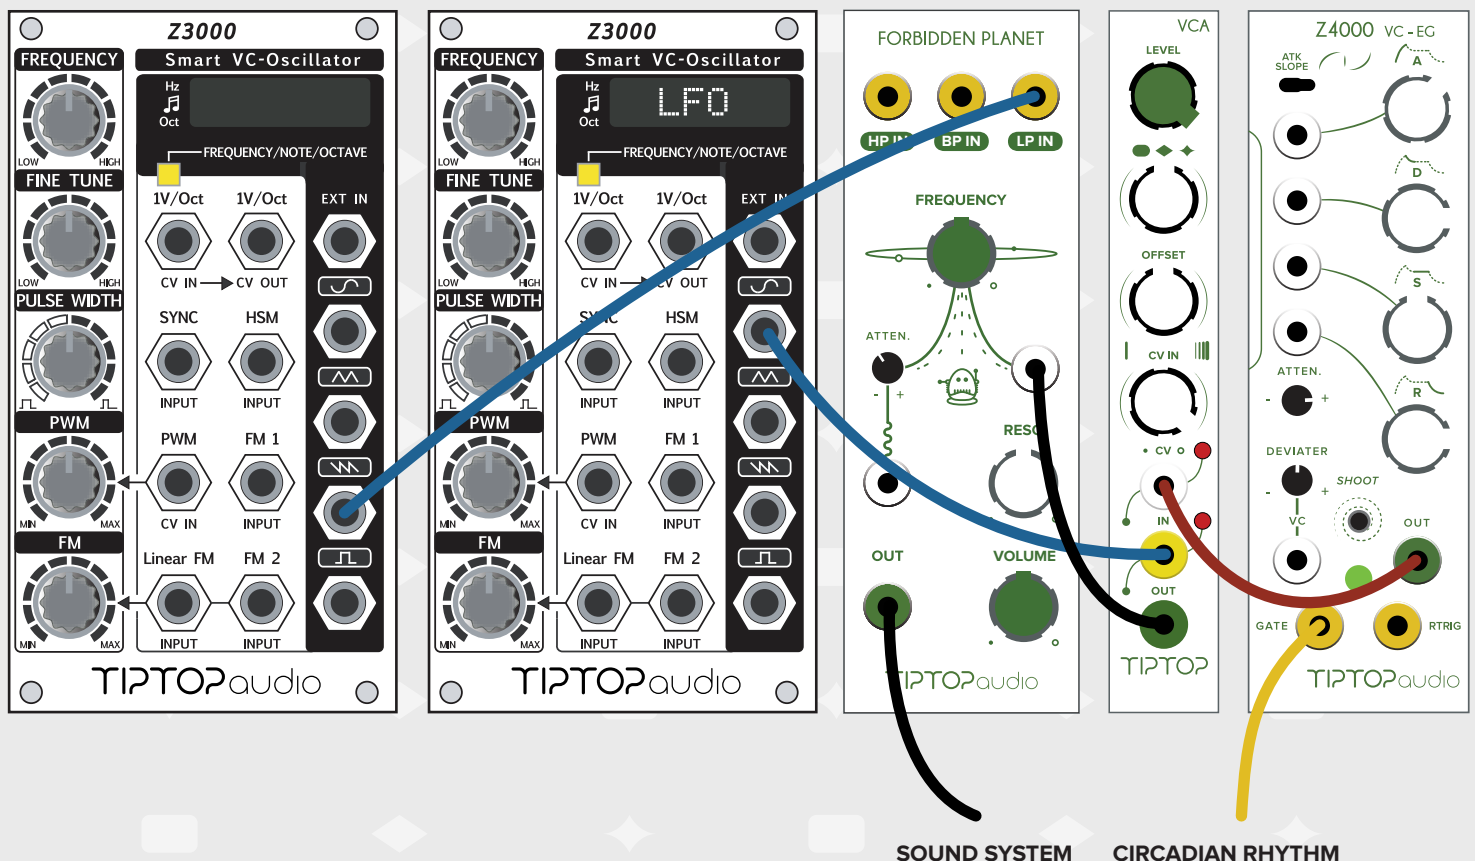


Voltage Controlled Audio Modulations (Patch 3):

In this patch we will use two Z3000's, one Z4000 and the VCA to create an FM patch with Index control.


1. Patch the sine wave of VCO1 to your sound system
2. Patch the sine wave of VCO2 into VCA audio in
3. Patch VCA audio out to FM in on VCO1
4. Patch Z4000 out to VCA CV and set the CV IN knob at almost full
5. Set the OFFSET knob half way and LEVEL knob at full

Now trigger the envelope and hear how the FM effect is fading in and out with the rise and fall of the envelope. Play with the knobs in all modules involved and see how deep this patch gets you. You can further experiment by adding a filter and another VCA between VCO1 and your sound system and have the same Z4000 control them as well by splitting the Z4000 out to all three destinations using Stackcables.

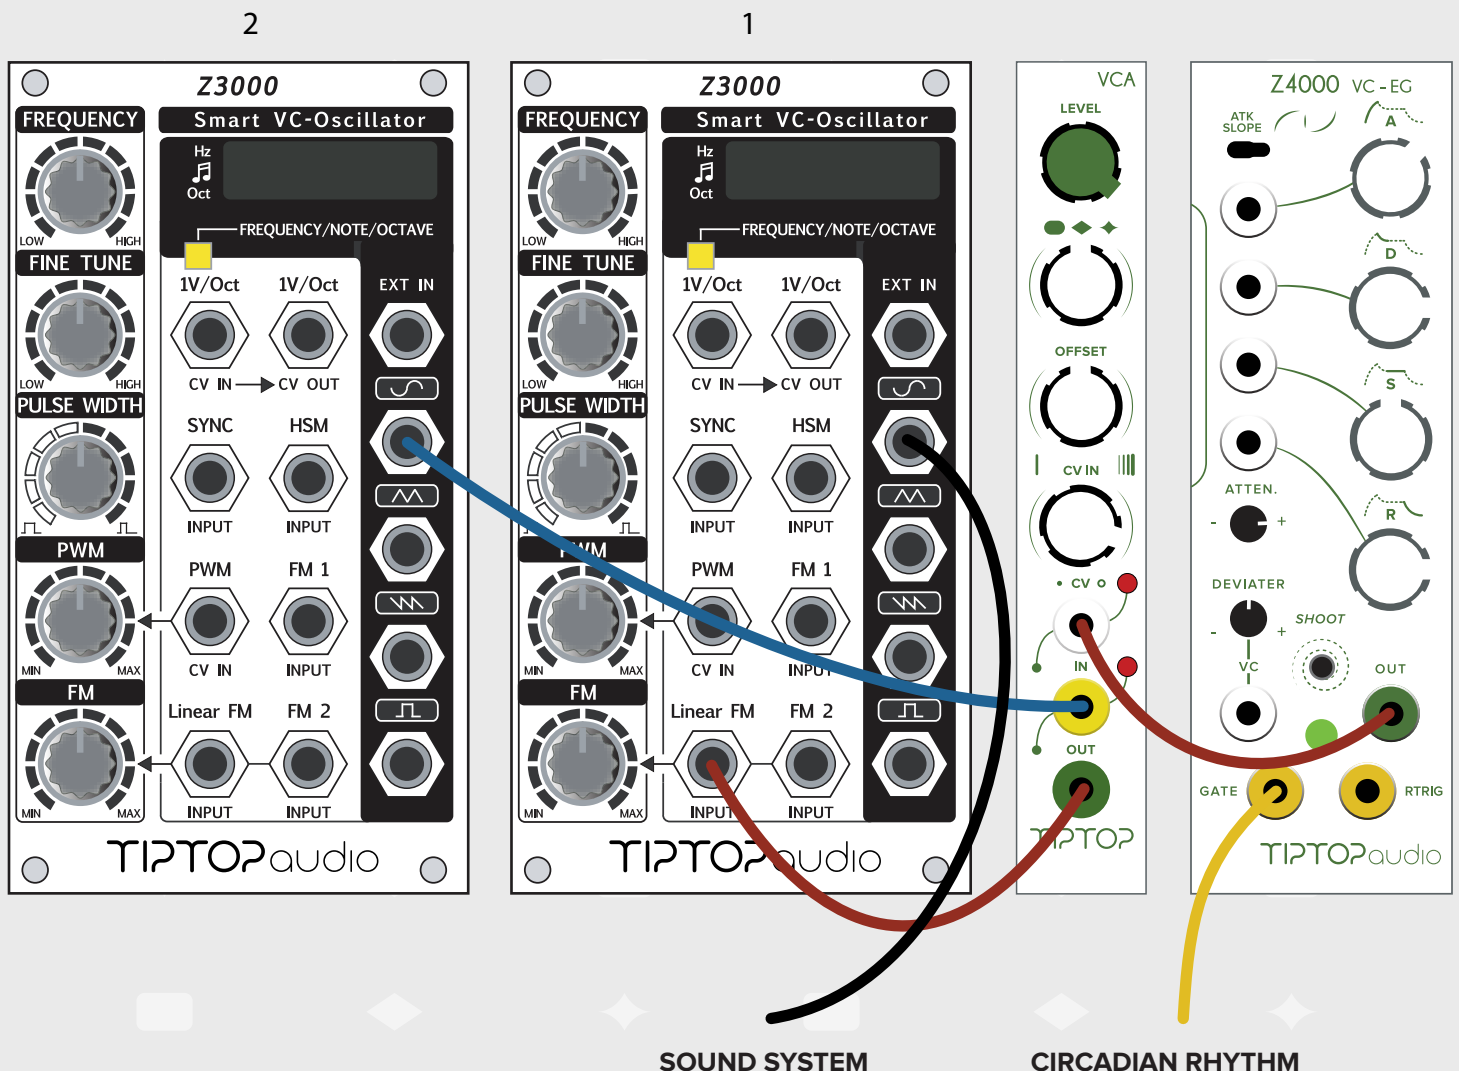

FX Send Automation (Patch 4):


1. Use a Stackcable to split the sound source and patch one side to the VCA IN.
2. Patch the other side to IN 1 on Mix7.
3. Connect VCA OUT to IN 1 on Z-DSP loaded with Dragonfly Delay card.
4. Set the mix control on Z-DSP to fully wet (right).
5. Connect Z-DSP OUT 1 to Mix7 IN 2. Set the VCA as follows: LEVEL to 1 o'clock, SHAPE to Logarithmic (left), OFFSET to fully OFF (left), CV IN attenuator to fully OPEN (right). Patch Z4000 envelope OUT to VCA CV IN. Set Z4000 as follows: Attack at 9 o'clock, Decay at 1 o'clock, Sustain to maximum (all the way right) and Release at 10 o'clock.
6. Patch the Mix7 OUT jack to your sound system.
7. The sequence will trigger the envelope to open the VCA the sound will pass through the VCA to Z-DSP.
8. The dry and wet signals are mixed together with Mix7. This way you can sequence your FX sends, freeing up your hands for other tasks.

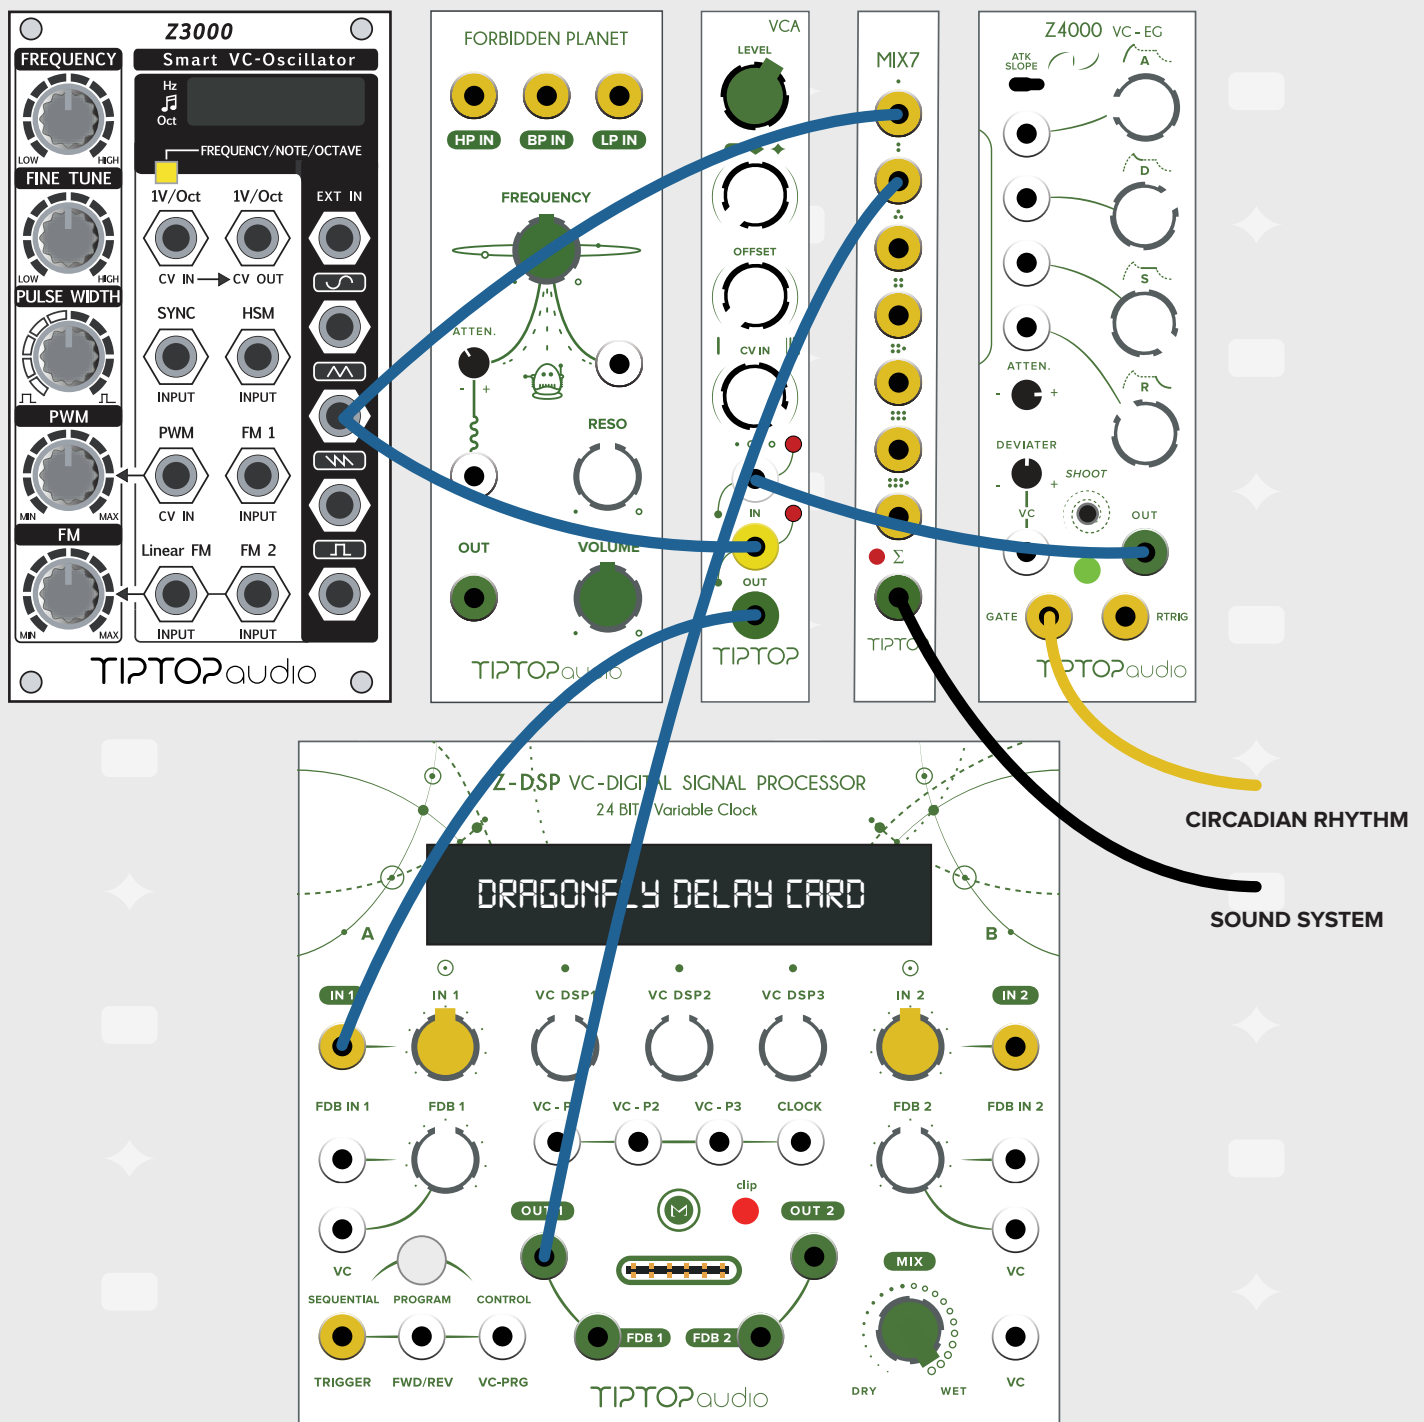

Alternative Sidechaining (Patch 5):

Side chaining is very easy to achieve using a VCA. Connect any waveform from Z3000 oscillator to a VCA signal input.

1. Connect the output of a VCA to your sound system.
2. Set The VCA as follows: LEVEL at 1 o'clock. SHAPE knob to fully to the left. Offset fully to the left. CV IN attenuator fully open, to the right.
3. Connect Z4000 ADSR OUT to the CV input of the VCA. Set Z4000 as follows: Attack at 10 o'clock, Decay at 2 o'clock, Sustain at 2 o'clock, Release at 2 o'clock, Deviator at 12 o'clock and the output attenuverter to fully to the left.
4. Trigger the envelope.
5. Now instead of opening the VCA the envelope will close it.
6. Adjust the VCA CV IN attenuator for creating classic side chaining effect: when the envelope is triggered simultaneously with a bass drum, signal will be ducked under it.
7. Play around with ADSR controls to set your perfect ducking curve.

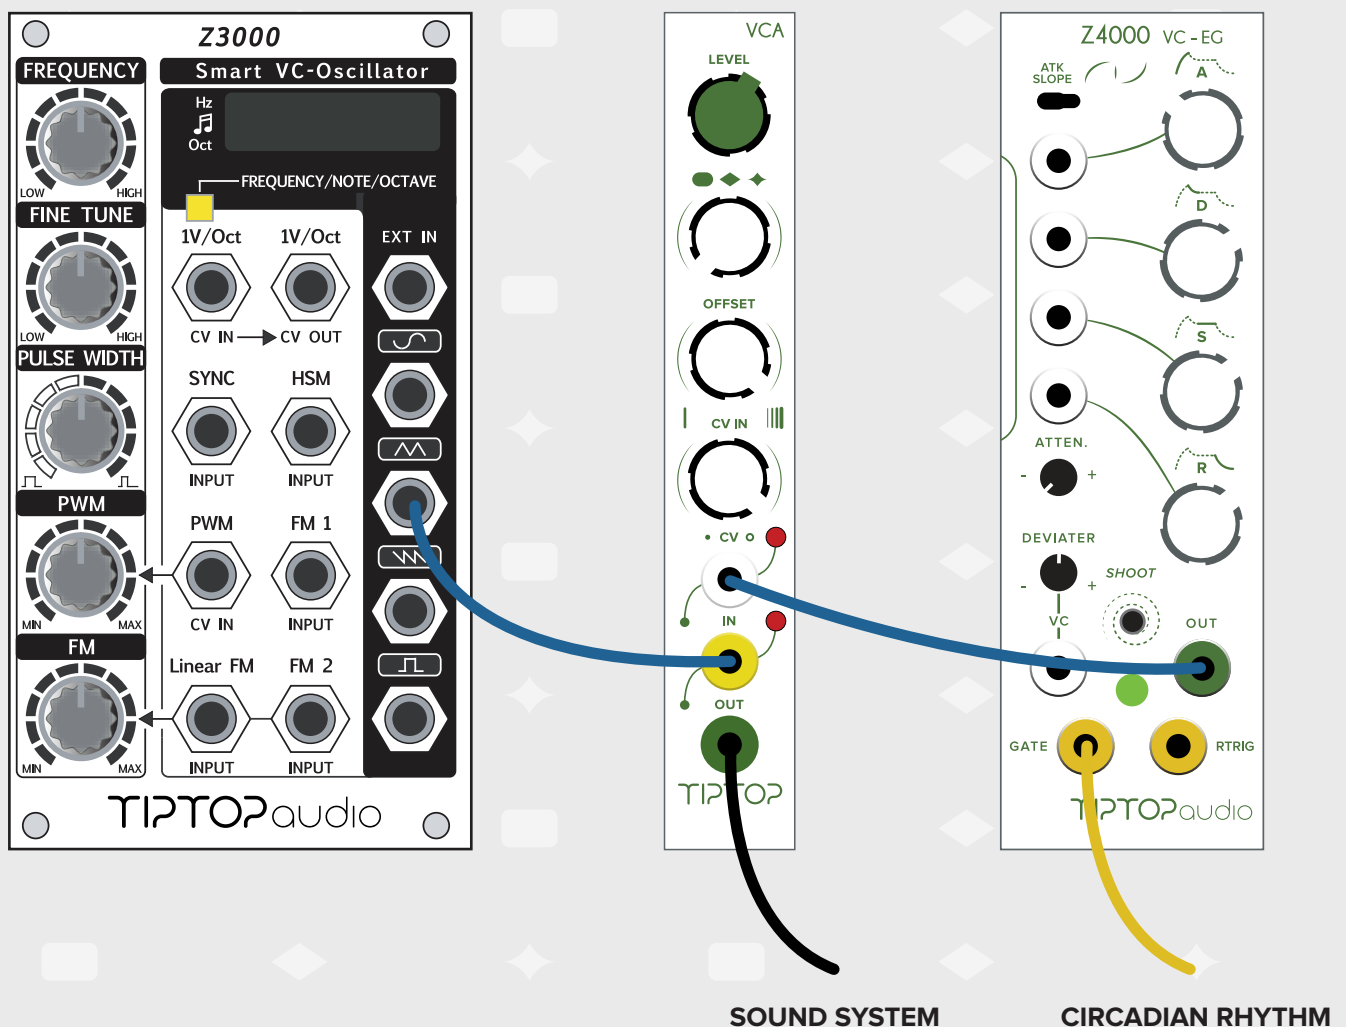

VCA Calibration:

Your VCA comes fully calibrated from the factory and no further calibration is needed. A slight adjustment of the calibration settings might be needed if the power supply of your system is not well regulated, if the module takes an impact, or if the module has been used for years and its components have aged. The SHAPE even-volume BIAS adjust is the most sensitive of all and might be affected by temperature, a slight readjust is easy to perform.

There are total three trimmers on the VCA module:

BIAS ADJ - TR2: The goal is to set all three different shapes to the same volume when CV IN is set to maximum, right before clipping. Connect a slow triangle wave to CV IN, connect sine wave at 1Khz to Audio in. Set the LEVEL knob to max, set OFFSET to OFF. Increase the CV IN knob till the CV clip light starts to flash, now decrease just to the edge before it starts flashing. Connect an oscilloscope and rotate the SHAPE knob, adjust TR2 until all three shapes are at about the same amplitude.

OTA OFFSET - TR1: The goal is to keep DC offset to a minimum. This trimmer lets you cancel the DC offset generated by the Operational Transconductance Amplifier (OTA). When there is no audio at the input, OFFSET is set to full and LEVEL to full, SHAPE knob at the center, use a voltmeter or oscilloscope and adjust TR1 until the output is set at 0V.

CV OFFSET ADJ - TR3: The goal is to keep minimum audio passing from IN to OUT when the VCA OFFSET and CV IN are OFF. This is called the VCA offset. Plug audio into IN, set the LEVEL knob at max, OFFSET fully OFF and CV fully OFF, SHAPE to center. Connect the VCA OUT to your sound system IN and increase the volume on you sound system until you hear the ground noise (hiss). Trim TR3 till you hardly hear the input sound. There will always be some signal passing through, but the idea is that this signal is so small that it will be undetected in normal level use.